


# DYNAMIC POWER STEERING

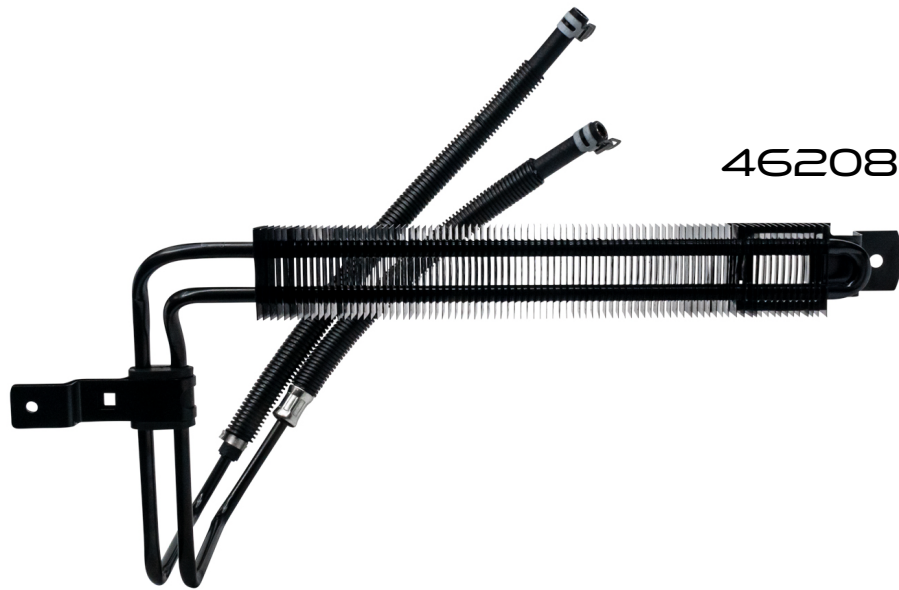

These Instructions are included to help you install your new power steering cooler.

1. Remove hoses attached to power steering cooler that run to the power steering pump and the power steering gearbox/rack and pinion assembly.
2. Unbolt the currently installed power steering cooler and remove assembly including hoses from vehicle while making note of position and orientation. Save all hardware. \*
3. Compare hose lengths on the removed cooler to the hoses provided with the new cooler and cut the new hoses to match the length and angle of previously installed product. \*\*
4. Install new hoses on new cooler using clamps provided.
5. Install new power steering cooler following the reverse procedure used to remove the old power steering cooler.

(\* Some vehicles may require the removal of additional brackets that prevent you from removing the old power steering cooler, if the cooler will not simply slide out after unbolting, please follow OE removal procedure)

(\*\* Some applications will require the new hoses to be cut to length. We suggest you measure the removed hoses length, and cut new hoses to match.)